



POWER SOURCE

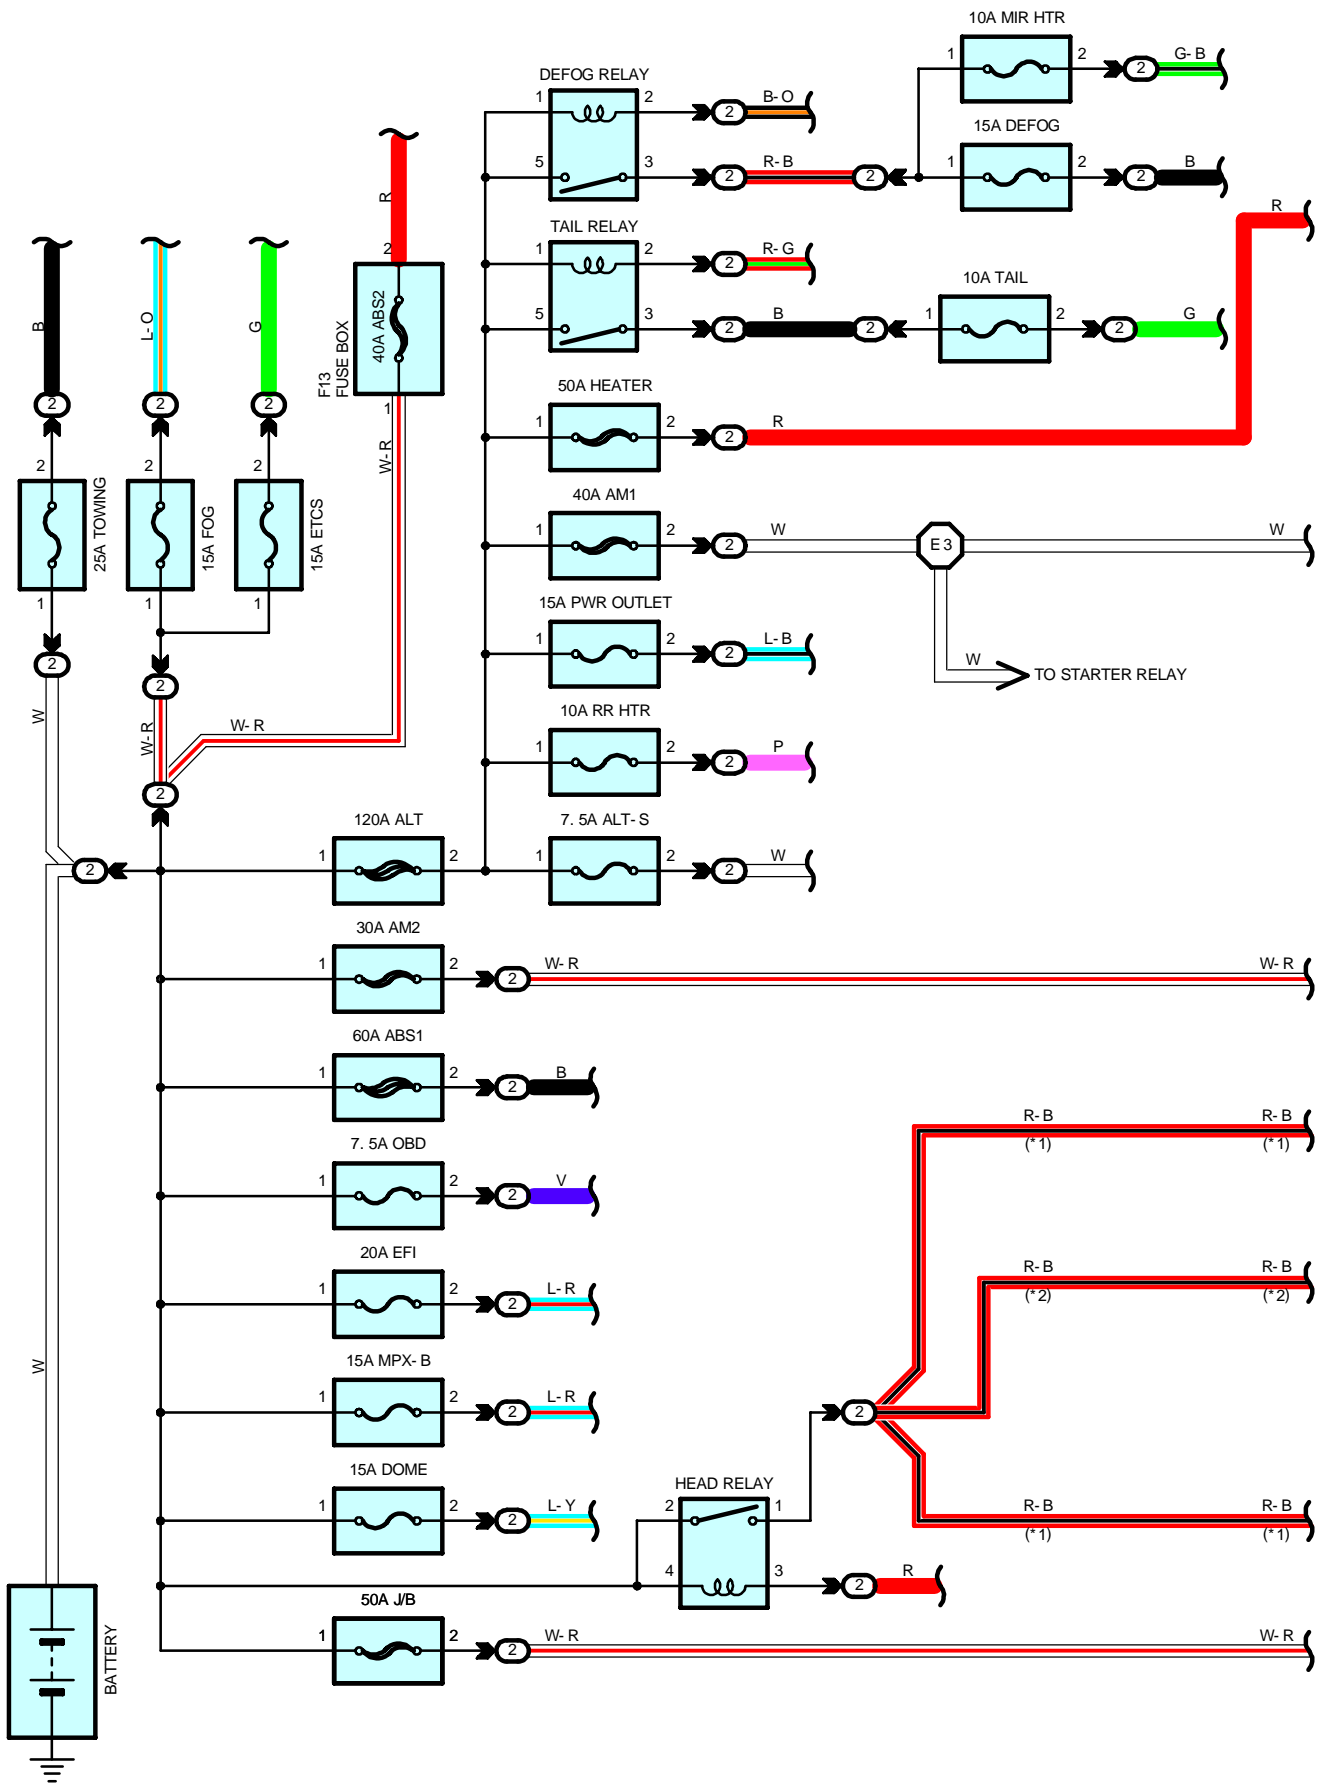

* 1 : W/ DAYTIME RUNNING LIGHT
 * 2 : W/O DAYTIME RUNNING LIGHT

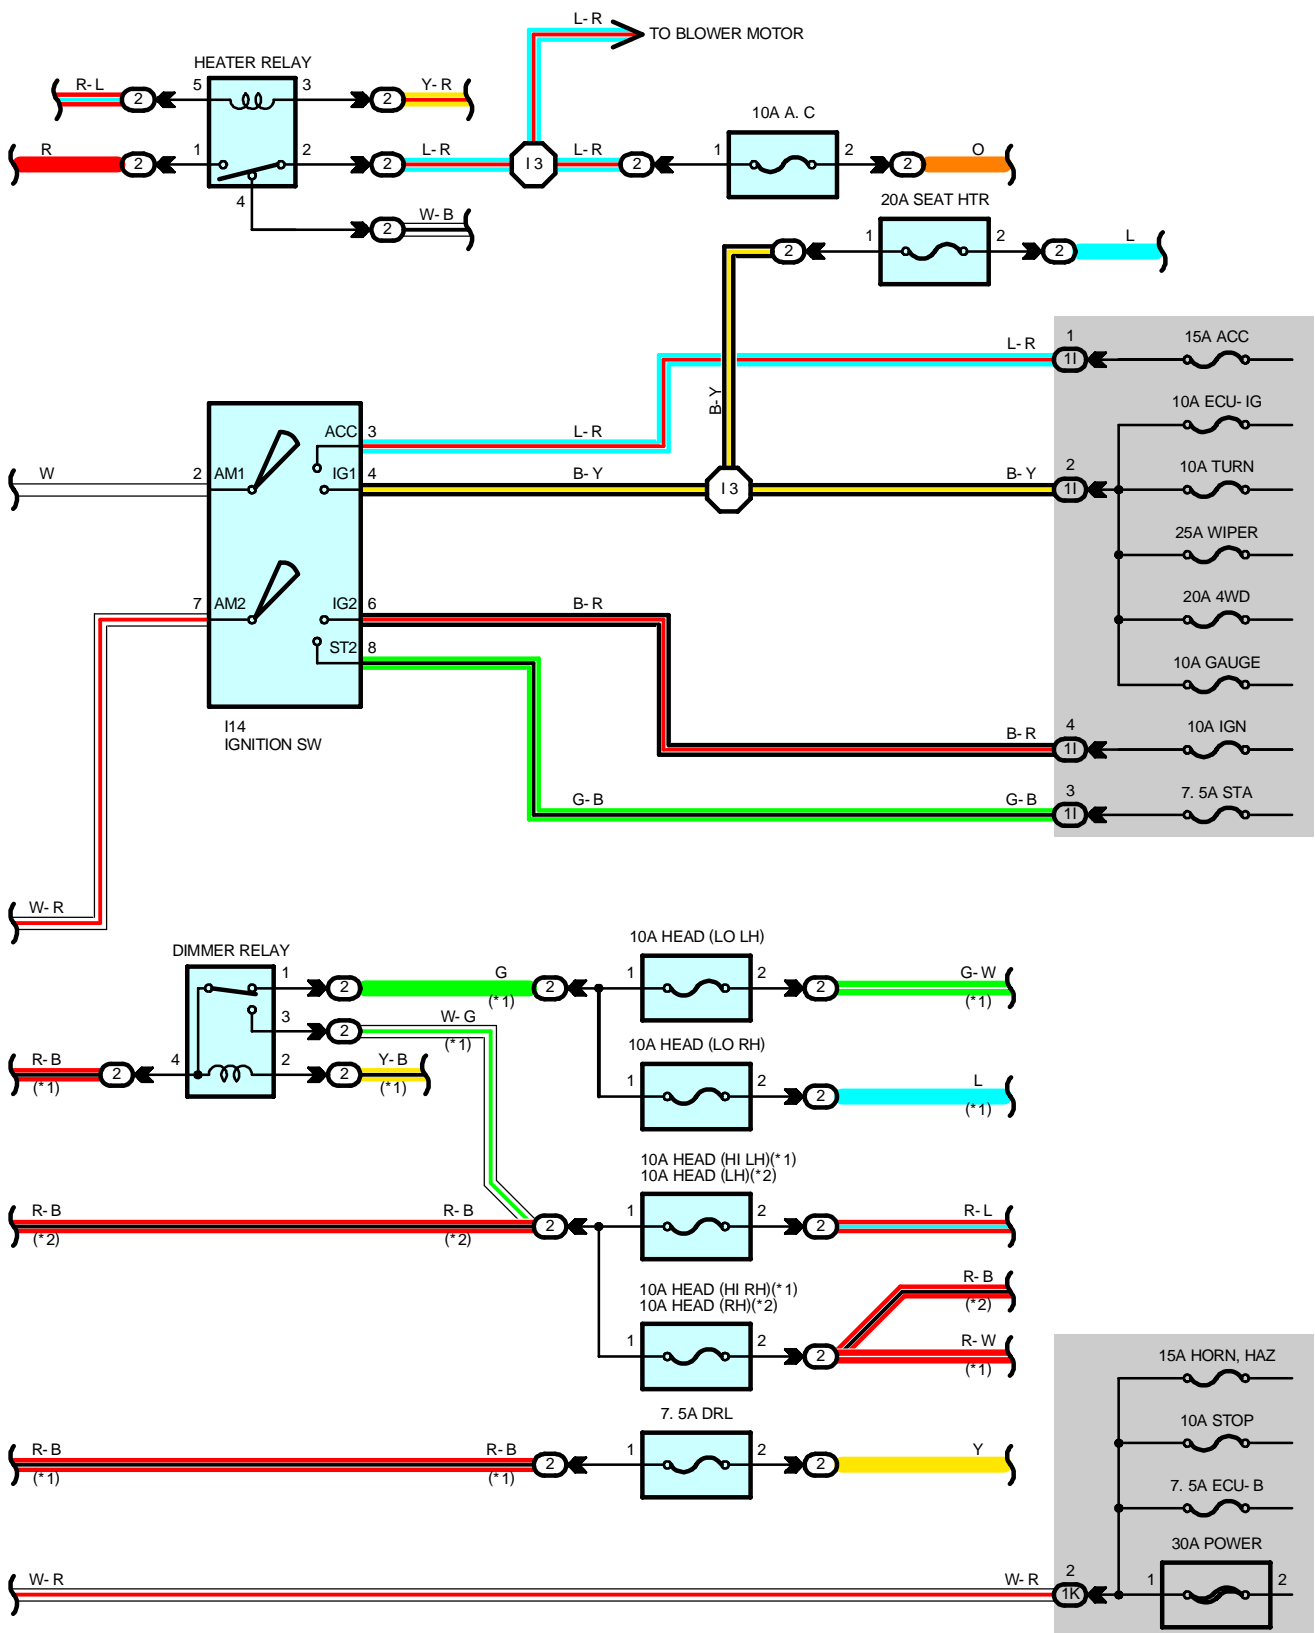

POWER SOURCE

SERVICE HINTS

HEATER RELAY

2-1 : Closed with ignition SW on and blower SW on (Manual Air Conditioning),
heater control panel SW [A/C amplifier] on (Automatic Air Conditioning)

HEAD RELAY

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position
Closed with engine running and parking brake lever released (w/ daytime running light)

I14 IGNITION SW

2-3 : Closed with ignition key at **ACC** or **ON** position
2-4 : Closed with ignition key at **ON** or **ST** position
7-6 : Closed with ignition key at **ON** or **ST** position
7-8 : Closed with ignition key at **ST** position

TAIL RELAY

3-5 : Closed with light control SW at **TAIL** or **HEAD** position

DIMMER RELAY

Changed from HEAD (LO) to HEAD (HI) with dimmer SW at **FLASH** position or with HEAD relay on and dimmer SW at **HIGH** position (w/ daytime running light)

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F13	28	I14	31		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1I	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1K		

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	36	Engine Room Main Wire	I3	40	Engine Room Main Wire

