



# Trailer Towing

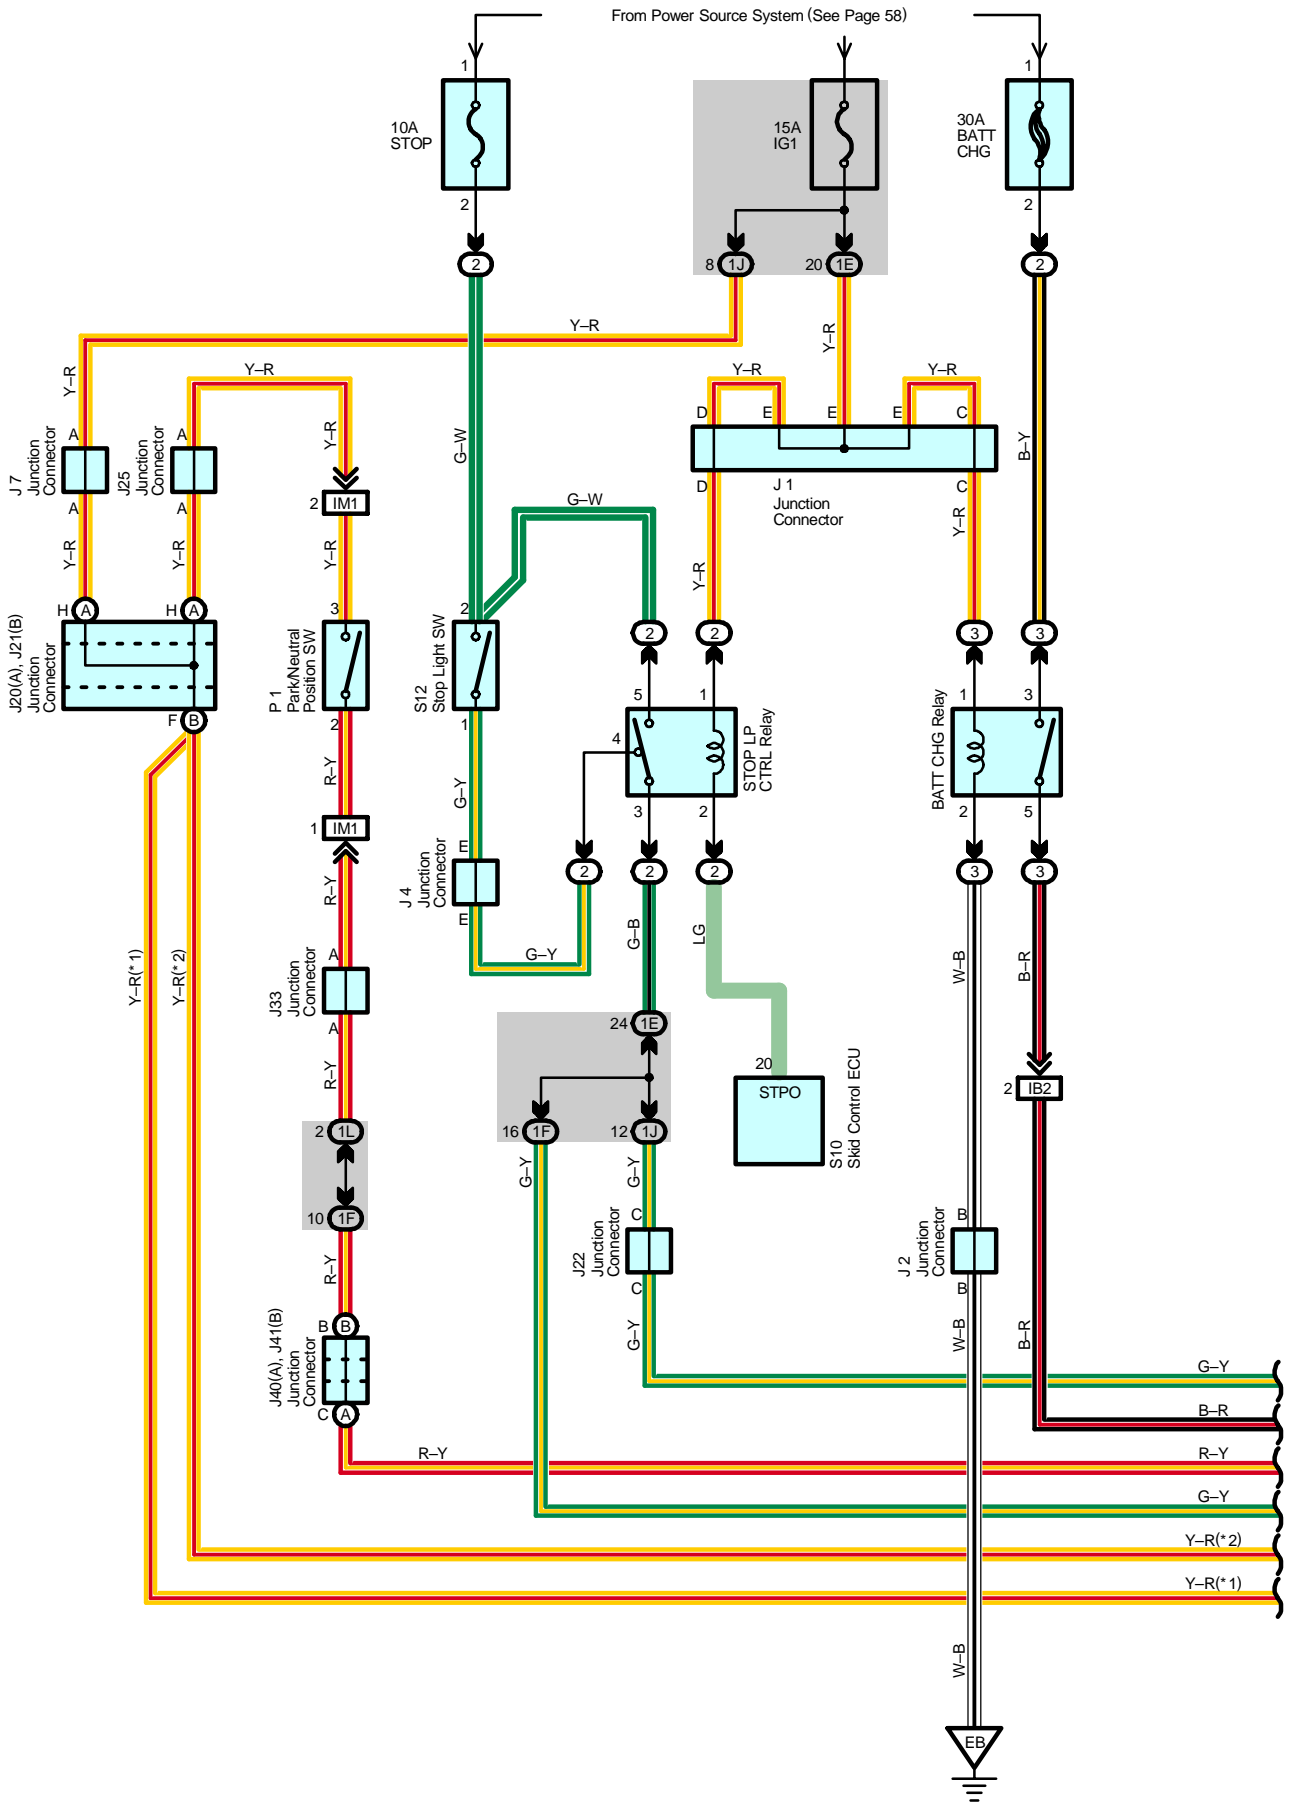


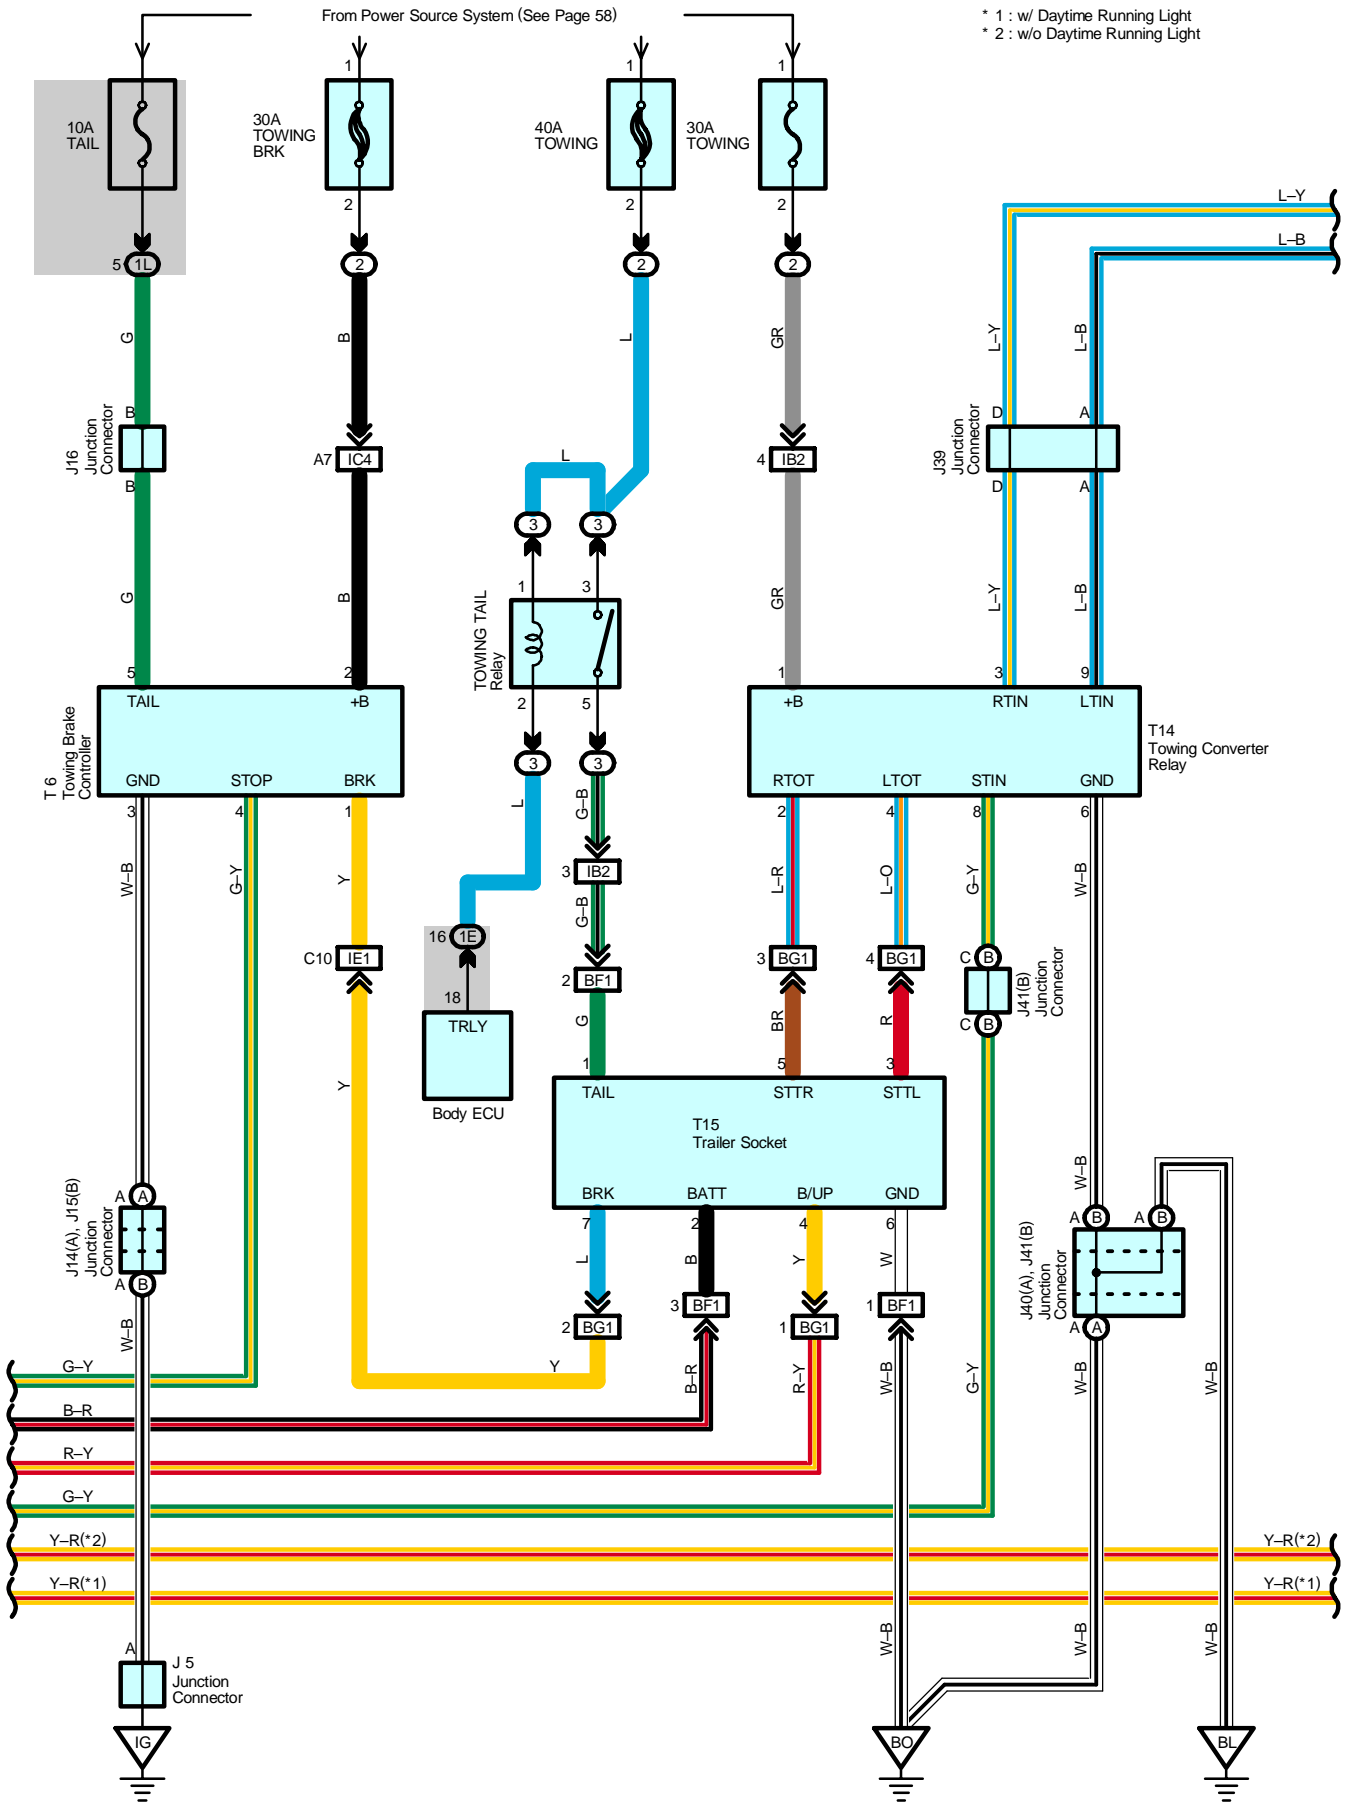

# Trailer Towing

- \* 1 : w/ Daytime Running Light
- \* 2 : w/o Daytime Running Light

From Power Source System (See Page 58)

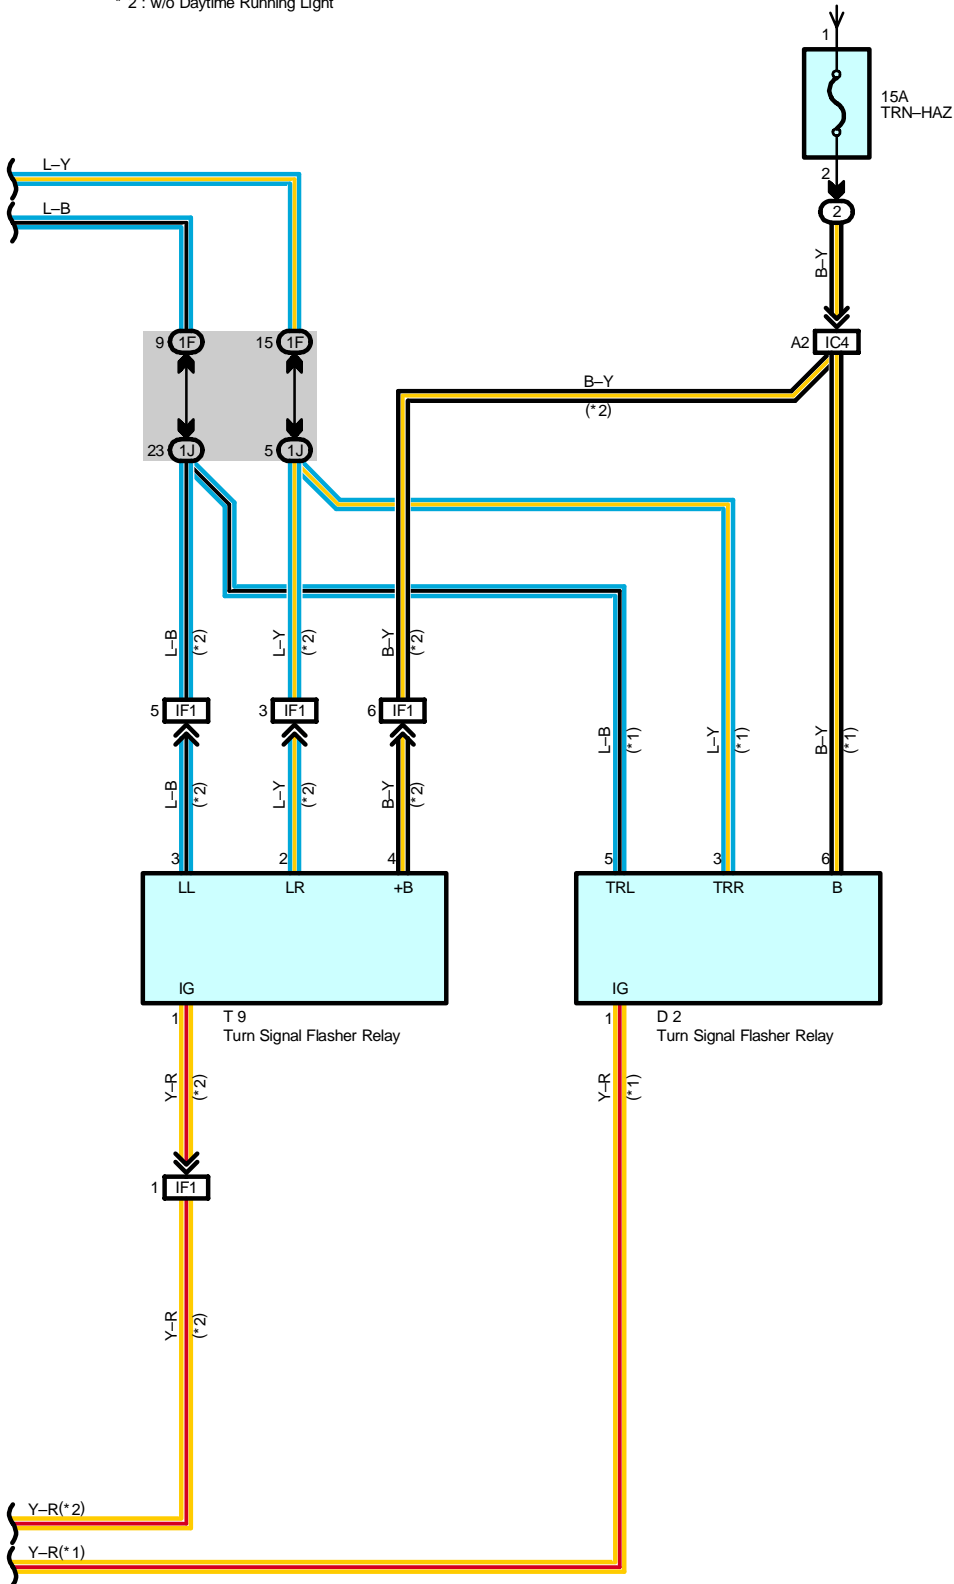

## Service Hints

### T14 Towing Converter Relay

- 1-Ground : Always approx. 12 volts
- 6-Ground : Always continuity

### T15 Trailer Socket

- 1-Ground : Approx. 12 volts with light control SW at TAIL or HEAD position
- 2-Ground : Approx. 12 volts with ignition SW at ON position
- 4-Ground : Approx. 12 volts with ignition SW at ON position and shift lever in R position
- 6-Ground : Always continuity

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
D2	<a href="#">37</a>	J15   B	<a href="#">38</a>	J41   B	<a href="#">40</a>
J1	<a href="#">33 (2UZ-FE)</a>	J16	<a href="#">38</a>	P1	<a href="#">33 (2UZ-FE)</a>
	<a href="#">35 (1GR-FE)</a>	J20   A	<a href="#">38</a>		<a href="#">35 (1GR-FE)</a>
J2	<a href="#">33 (2UZ-FE)</a>	J21   B	<a href="#">38</a>	S10	<a href="#">39</a>
	<a href="#">35 (1GR-FE)</a>	J22	<a href="#">38</a>	S12	<a href="#">39</a>
J4	<a href="#">38</a>	J25	<a href="#">38</a>	T6	<a href="#">39</a>
J5	<a href="#">38</a>	J33	<a href="#">38</a>	T9	<a href="#">39</a>
J7	<a href="#">38</a>	J39	<a href="#">40</a>	T14	<a href="#">41</a>
J14   A	<a href="#">38</a>	J40   A	<a href="#">40</a>	T15	<a href="#">41</a>

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)
3	<a href="#">23</a>	Engine Room R/B No.3 (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	<a href="#">24</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	<a href="#">24</a>	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1J	<a href="#">25</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	<a href="#">48</a>	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)
IC4	<a href="#">48</a>	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	<a href="#">50</a>	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IF1	<a href="#">50</a>	Instrument Panel Wire and Relay Wire (Behind the Instrument Panel J/B)
IM1	<a href="#">52</a>	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BF1	<a href="#">54</a>	Frame No.3 Wire and Floor No.2 Wire (Rear Side of Side Frame LH)
BG1	<a href="#">54</a>	Floor No.2 Wire and Frame No.3 Wire (Rear Side of Side Frame LH)

## : Ground Points

Code	See Page	Ground Points Location
EB	<a href="#">44 (2UZ-FE)</a>	Front Left Fender
	<a href="#">46 (1GR-FE)</a>	
IG	<a href="#">48</a>	Left Kick Panel
BL	<a href="#">54</a>	Floor Seat Crossmember LH
BO	<a href="#">54</a>	Rear Pillar LH